

USER MANUAL

LedSuite APP

Version: V1.0 Date: 2023.7.5



Catalog

Catalog	
Description	
Register Account	
Login	3
Add screen	2
Add program	5
Template program	(
Text program	6
mage program	
Time program	3
Dial program	<u>C</u>
Timing program	10
Sensor program	11
Send program	11
Device manage	13
Material	18
Mine	18
CONTACT US	20




Description

LedSuite APP is the mobile version of onbon Ledshow-Suite PC software. Supports all models of onbon asynchronous product controllers.LedSuite APP communicates via WiFi;Supports rich media program area; it supports single-screen mode and multi-screen mode; Supports template function and cloud material library;Supports local mode and cloud mode; it has a simple interface and easy operation.

Register Account


The first time you log in to LedSuite APP you need to register an account, click [Register Account] to enter your username, password, cell phone number and other information respectively, click [Login/Register] to complete the account registration.

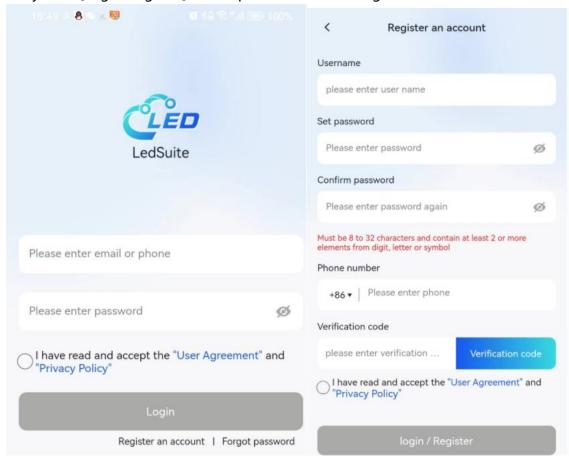

www.onbonbx.com 第 2 页

Login

After successful account registration, enter your cell phone number and password, check that you have read the User Agreement and Privacy Policy, and then click [Login] to enter the APP interface. Users can also get the [Verification Code] login through the cell phone number.

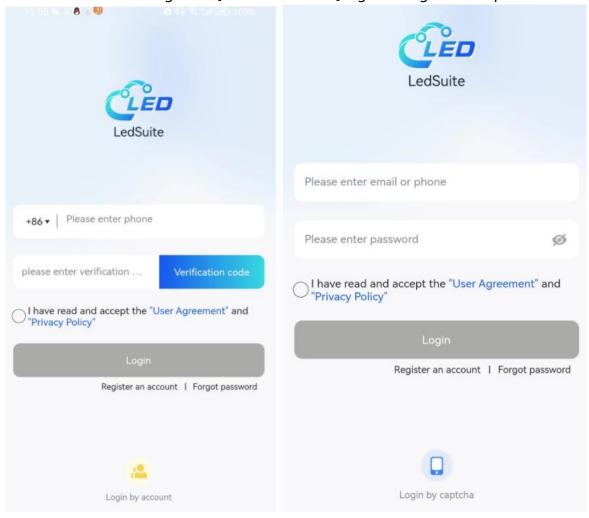


www.onbonbx.com 第 3 页




Add screen

To add a screen in single-screen mode: click [Search], select a searched screen and click [OK] to add it successfully.


If you search for more than one screen, select more and click OK to enter multi-screen mode.

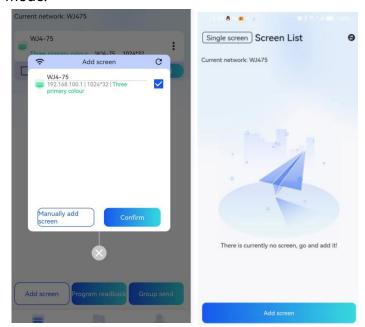

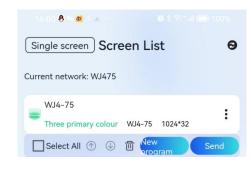

第4页

To add screens in multi-screen mode, click [Add Screen] and then select the searched screen, click [OK] to add successfully.

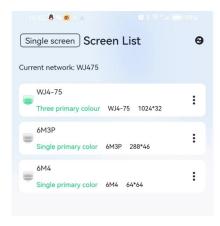




Add program


For single screen mode pls click the

, then click the

new program"

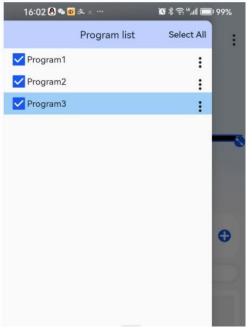


For multiple screen mode, select the added screen and click "new program"

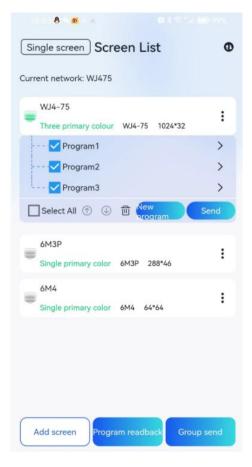

www.onbonbx.com 第 5 页

Template program

Program editing interface click template to choose free layout, text template, timing template, dial template, etc.; you can also click custom template.

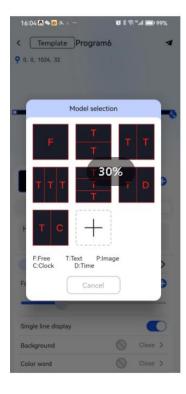



Text program

- Editable text.
- Changes the font, font color,, font background, bold, italic, underline, left, center, right, top, top and bottom center, bottom, font size of the text.
- Supports single-line display and multi-line display.
- Supports header and footer functions.
- Supports regional background, colorful characters (some models).
- Word spacing, line spacing.
- Display stunt, stunt speed, dwell time.
- Mirror display.
- Border.




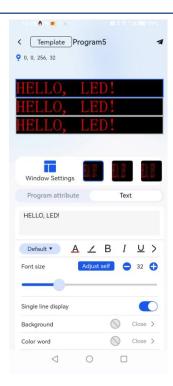


Image program




www.onbonbx.com 第 7 页

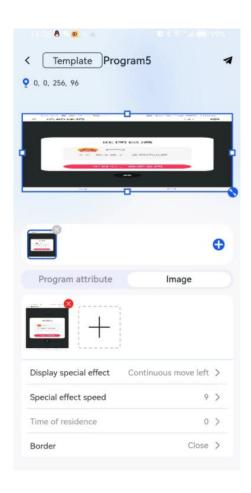

- Click + to add multiple images.
- Display stunts, stunt speed, dwell time and other adjustments.
- Border.

Time program

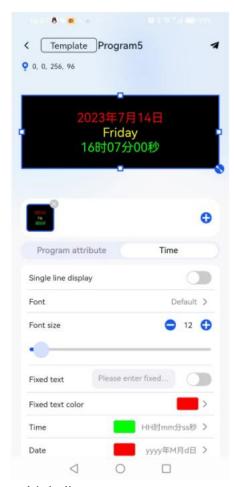


- Display single line or multiple lines.
- Adjusts the font.
- Adjust the font size.
- Add fixed text and modify fixed text color.
- Modify the format and color of time, date, and day of the week.
- Border.

www.onbonbx.com 第 8 页



Dial program

- Allows you to choose from three different styles of dials (round, square, and linear).
- Adjust the time zone of the dial.
- Modify the size and color of the dial.
- Modify the size and color of the hour hand.
- Modifies the size and color of the minute hand.
- Modifies the size and color of the seconds hand.
- Add bezel.

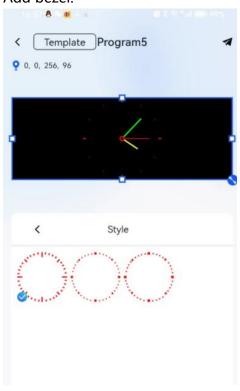

www.onbonbx.com 第 9 页



Timing program


- Display single line and multiple lines.
- Modify font and font size.
- Add fixed text and modify fixed text color.
- Select target time and target date.
- Modify the color of time.
- Time accumulate.
- Hide/show units.
- Limit the display of days, hours, minutes, seconds.
- Border.



www.onbonbx.com 第 10 页

Sensor program

- Choose from a wide range of sensor types and models.
- Modify the font and font size of the text.
- Add fixed text.
- Select the access position.
- Adjust the display unit.
- Adjust the precision and correction value of the value.
- Set alarm conditions.

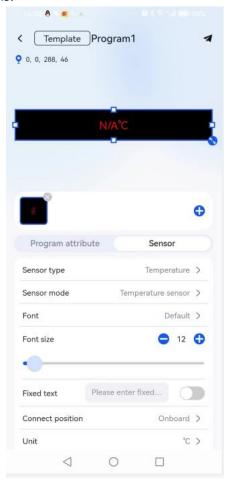


Send program

www.onbonbx.com 第 11 页



In single-screen mode, click the "send" button to send the programs checked in the [Program List] to the screens in order.

In multi-screen mode, click the [Send] button within the program, [Send] button in the screen list, [Group Send] button, jump to the screen selection interface, select the corresponding device under the current network, and then click the [OK] button to send successfully.

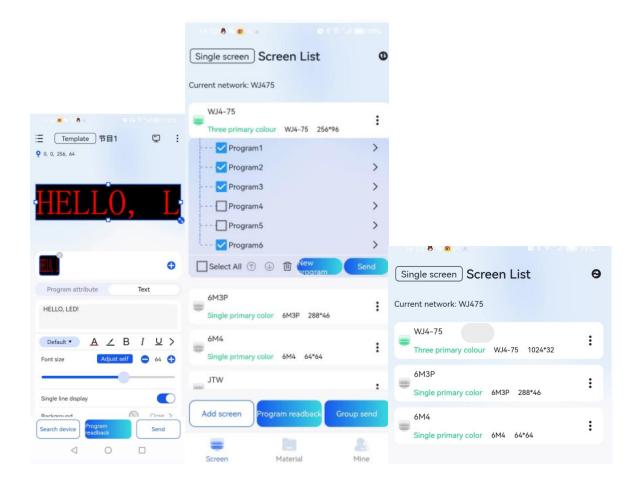

www.onbonbx.com 第 12 页




Device manage

In single-screen mode, click the button to enter the current device list interface;
In multi-screen mode, after selecting a screen in the screen list, click [Device] to enter the device management interface




It can display the model, name, IP address, screen reference, firmware version number, barcode and other information of the control card.

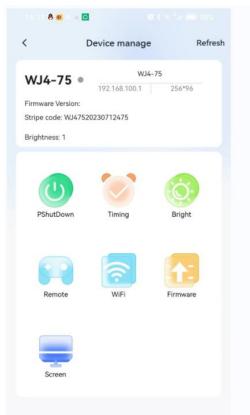

[Timer On/Off]: You can set the time for timer on/off.


www.onbonbx.com 第 13 页



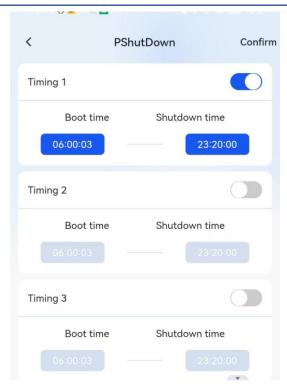

• [Brightness]: manual dimming and time-sharing can be selected.

• 【Time calibrate 】: You can calibrate the time of the control card.

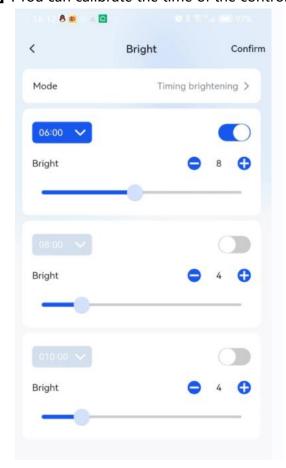

www.onbonbx.com 第 14 页




 [Remote Control]: You can use the remote control to control the device's on/off, volume adjustment, brightness adjustment, locking the screen, and program selection and playback.



Screen Settings: you can modify some parameters of the control card Screen size: width, height, screen type, IP address.

Scanning configuration: scanning mode, module list, driver chip, line decoding mode. Advanced Settings: Data Polarity, OE Polarity, Shift Clock, Line Fade Time, Color Channel. Auto Scan: Auto scanning configuration of screen parameters.

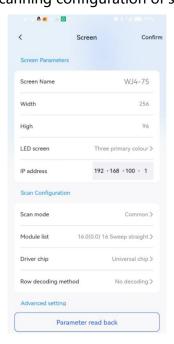

www.onbonbx.com 第 15 页



• [WiFi Configuration]: Modify the name and password of AP WiFi according to the requirements, click [Setting] to set up successfully.




[Firmware Management]: You can find the corresponding firmware by selecting the search method: all, by connected devices, full color, single and double color.


Click to download the firmware locally, click [Use] to jump to the device selection interface, select the corresponding device to upgrade.

www.onbonbx.com 第 16 页



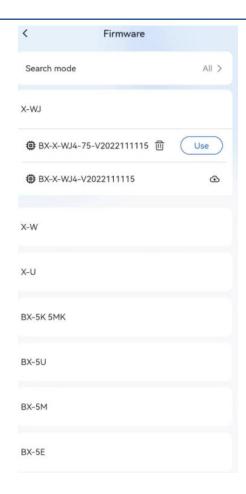

Screenshot: It can display the screenshot of the current control card in the screen display, which can display: switching status, brightness adjustment mode, current brightness level, screen lock status, program lock status, controller time, output mode, etc.

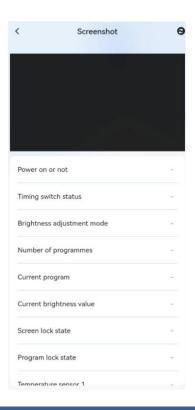


www.onbonbx.com 第 17 页

Material

In multi-screen mode, click "material" to upload videos and pictures from local albums, or upload pictures or videos in the picture area or video area of the program editing interface.

After clicking $\stackrel{+}{=}$ in the picture area or video area, select [Select from material Library] for the add path

to use the material in the library.

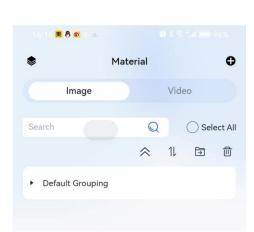




Mine

- 【Connection mode】: you can choose local mode and cloud mode
- [Language]: Can change the language of APP (Chinese and English)
- [User Agreement] : You can check the two agreements at any time.
- [About Us]: Click to jump to the official website and show the contact information.
- [Version Number]: you can see the current version number of APP.
- [Clear Cache]: Click to clear the local cache.
- [Account Security]: you can change your avatar, user name, login password, cell phone number, and cancel your cell phone number.

www.onbonbx.com 第 18 页



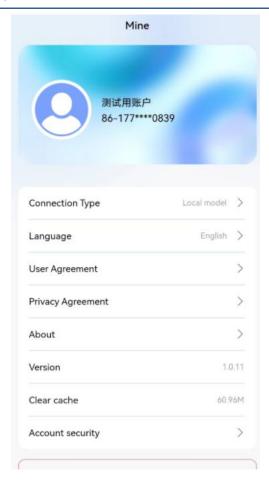

www.onbonbx.com 第 19 页



CONTACT US

Shanghai ONBON Technology Co., Itd (Headquarters)

Address: 7 Floor, Tower 88, 1199#, North Qinzhou Road, Xuhui District, Shanghai

City, China

Tel Phone: 086-21-64955136

Fax: 086-21-64955136 Website: www.onbonbx.com

ONBON (Jiangsu) Optoelectronic Industrial Co.,LTD

Address: 1299#, Fuchun Jiang Road, Kunshan City, Jiangsu Province, China

Sales Contacts

Tel: 0086-15921814956 0086-15800379719

Email: onbon@onbonbx.com

Second Development

Tel: 0512-66589212 Email: dev@onbonbx.com

iLEDCloud

Website: http://www.iledcloud.com/

www.onbonbx.com 第 20 页